AVBSJVAA

AVBSJVAARED

COLD PRESS SLOW JUICER

PACKAGE CONTENTS

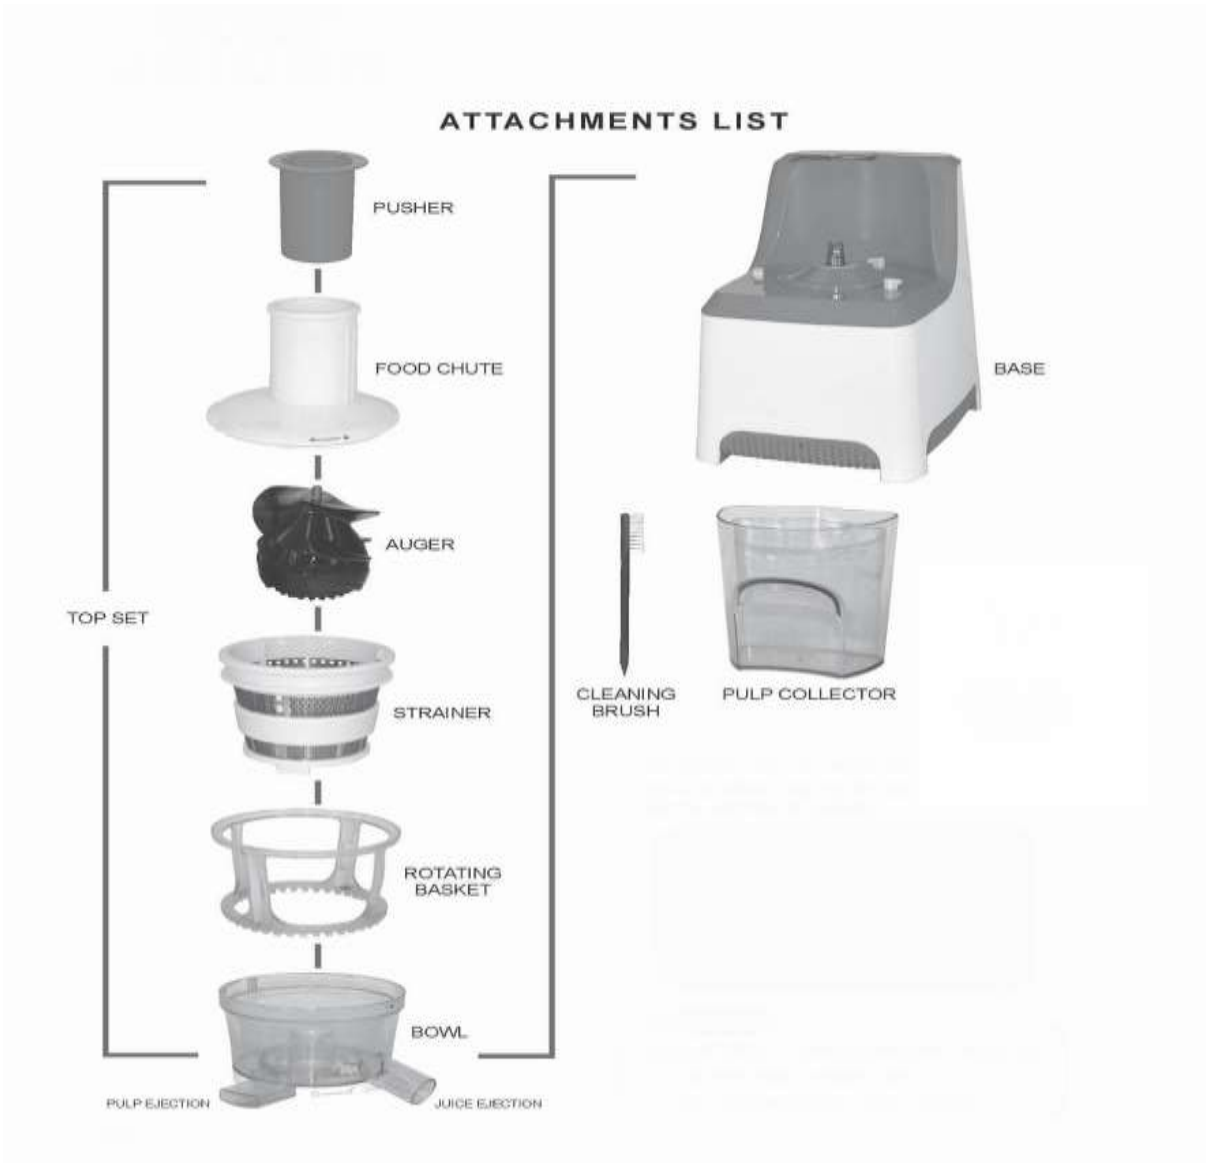

In the box

- Pusher
- Food Chute
- Auger
- Strainer
- Rotating Basket
- Bowl
- Base
- Pulp Collector
- Cleaning Brush
- Instructional DVD
- Recipe Booklet

IMPORTANT SAFEGUARDS

For your own safety read the following instructions carefully before attempting to connect this unit to mains power:

You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources will damage the appliance.

1. Please carefully read the instructions and components before operating.
2. This appliance is intended for household use only.
3. Do not use the appliance other than intended or specified purposes.
4. Make sure the voltage mark on the appliance corresponds to the voltage in your home before plugging in the power cord in order to avoid damage to the appliance.
5. To protect against electrical shock, do not place cord, plug, or base unit in water or other liquids. Don't operate machine with wet hand or place on a wet working place. Do not let the cord hang over the edge of the table or counter or touch hot surfaces.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. Unplug from outlet when not in use.
8. It is prohibited to plug or unplug with wet hands to avoid electric shock.
9. To disconnect, remove plug from the electric outlet.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. Check the strainer every time you want to use the appliance. If you detect any cracks or damage, do not use the appliance and contact the nearest service centre.
13. Always securely clamp in place all parts before the motor is turned on. Do not unfasten while appliance is in operation.
14. Avoid contacting moving parts. Make sure the motor stops completely before disassembling.
15. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
16. Do not let the appliance go on working when unattended.
17. Do not disassemble the base.
18. Do not put any foreign materials into the machine.
19. Do not use for more than 30 minutes continuously.
20. It is prohibited to let the machine operate in idle state. Idling time can't exceed 2 minutes or it will damage the spiral blade.
21. During operation, please feed the food material slowly to avoid clogging rotation. If clogging happens, please stop working immediately. Reverse it for a while then open the lid to take out the food and then it can work again.
22. Please use the special pressing stick to feed food into the feeder opening.
23. Before use, please cut ingredients into small pieces and take out core or it will cause clogging.
24. It is prohibited to insert too big or too hard food materials. If those foods have been put into

the feed tube and thus blocking the spiral blades, immediately press the reverse button to anti-block. If blocking rotation protection happens during operation, please unplug the power and clear up, wait 10 seconds then you can connect to power and use it again.

25. Do not use too hard food materials. Cereals should be carefully immersed and soaked in water before it can be fed into the feeder opening. This can avoid damage to the machine.
26. When using, if there are any abnormal sound, smell, overheating, smoke, etc., immediately turn off the power and call the service center for maintenance and repair. This can avoid electric shock, electricity leakage and fire hazard.
27. It is prohibited to scrub and wash the machine body on water-filled platform or pour water to wash the inside of the machine to avoid fire, electric shock or damage to machine body, etc.
28. When making carrot juice, please pay attention to the size of carrots used, the size should be no more than 80mm in length, no more than 15mm in width, and no more than 15mm in height. Interval feeding time should be no less than 5 seconds.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Any servicing should be performed by an authorized service representative.

REQUIREMENTS

Voltage: 220-240V.A.C Hertz: 50Hz Rated Power: 150W
Speed: 80 RPM

INTRODUCTION

Introducing the Avancer Black Label Slow Juicer! Instead of using high-speed blades to extract the juices from fruits and vegetables, this device squeezes them and draws out all the lovely juices and nutrients.

It does this by driving the fruit and vegetable pieces you feed in into a condensing screw, which is basically a screw whose gaps get smaller as you reach the tip.

At the bottom, the pieces are squeezed to extract every drop possible, and the pulp is driven out via a different duct. You get a smooth drink without lumps and with all the flavour and nutrients!

One massive advantage that the Avancer Black Label Slow Juicer has over conventional juicers and blenders is its very quiet operation. Because it uses low speed (80-120 RPM), it produces less noise, since it does not lose kinetic energy due to impact. This also means that the low-speed high-torque DC motor used in this device will last longer than an equivalent high-speed motor.

The low speed operation requires a smaller, less energy intensive motor which means lower operating costs than a conventional blender or juicer, saving you heaps!

Our Slow Juicer uses a paltry 150 watts, compared to some other blenders or juicers which use 300-800 watts

Read and follow all directions for usage and maintenance carefully and you'll benefit from years of trouble-free and cost effective juicing. You can even visit our blog for some tips and tricks to get the most out of your new juicer.

Installation

The Slow Juicer is virtually assembled straight out of the box, instructions are shown below. We recommend washing all removable parts in warm water with a biodegradable, non-abrasive liquid detergent before the first use. Rinse thoroughly with water and allow to air-dry. This will eliminate any traces of dust or residue from manufacturing or shipping. Never submerge the Slow Juicer motor base in water or any other liquid.

1. Assemble the bowl on the base. Make sure the bowl fits all the way into the shaft of the base. Twist the bowl to close.

2. Assemble the strainer and rotating basket into the bowl. Make sure the red dot and the red arrow align.

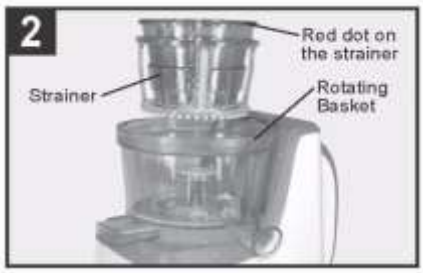

3. Place the auger in the center of the bowl.

4. Place the food chute onto the bowl. Make sure the gray dot on the food chute and the red

dot on the bowl align.

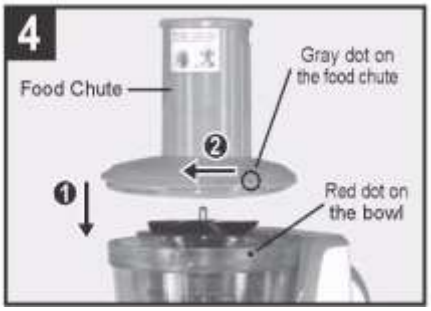

5. Make sure the gray dot on the food chute points to close sign on the base. Please ensure that you check the dots are aligned carefully as improper assembly can cause the lid to become stuck.

6. Reverse the step carefully when disassembling.

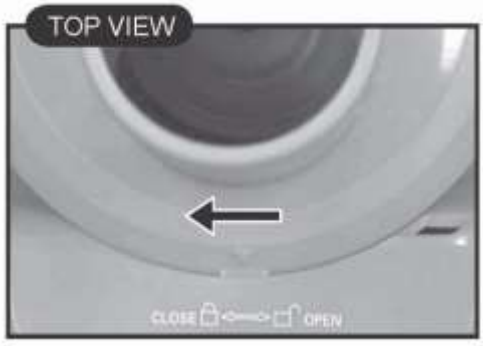

Operating the device

1. Once all parts are securely in place, connect the power cord to an approved power source.
2. Place the pulp container under the pulp ejection and a glass under the spout for juice.
3. The Slow Juicer has three settings:
   ON – This starts the motor for juicing
   OFF – This stops the operation
   REV – This moves the auger in the opposite direction

4. Before placing food in the juicer, please make sure all foods are thoroughly washed and cleaned, cut all foods to an appropriate size to easily fit into the food chute. Please remove any hard seeds before juicing.
5. For the most part, when placing food into the Slow Juicer, the auger will pull in the food and start juicing immediately. You will need the included pusher with some foods.
6. The Slow Juicer has a unique simple cleaning process when switching between different flavors of juices and fruits. When you are ready, simply pour water through the food chute. This will rinse out most of the residue and you are ready to keep juicing.
   NOTE: This is not an alternative to a complete cleaning of each disassembled part.
7. As shown below, the Food Chute edge must point to “close” sign on the base in order for the machine to operate.

WARNING: Make sure all parts are securely in place before operation. Do not operate without food.

Tips

1) Start off with low-fibre fruits and vegetables first. So carrots, melon, berries and other less stringy ingredients should go through the juicer before celery, sweet potato, and others.

2) Avoid juicing fruits with low water content. Bananas and avocados are the two main fruits that are pretty dense and very low in water content. They can clog up your machine and most of the fruit is wasted because it goes straight to the pulp. If you really want to have these fruits in your juices then blend them first and then add other juice to them.

3) Chop up your large ingredients, such as apples, so that they easily fall down the chute. This will make the process a lot easier.

4) Run your juice through the juicer a second time for a smooth, pulp-free juice. Of course, having pulp or not is a matter of personal taste, and having some pulp in your juice is actually healthy and helps boost your fibre intake.

5) Don’t worry about balling up or clumping leafy ingredients. Unlike old-fashioned juicers, which require a degree of pressure on the fruit & veggies in order to make sure they will be chopped up by the blade, a slow juicer only requires you to simply feed in your ingredients.

6) Clean your juicer in between fruits and vegetables. Simply add some water to the juicer to quickly clean it in between ingredients so the machine doesn’t clog up.

7) Make sure you feed in the ingredients at a slow pace, allowing each piece time to become

juiced. This will avoid your juicer clogging up or leaking.

Cleaning and Maintenance

First read the instructions in the section titled “IMPORTANT SAFEGUARDS”.

1. Switch off the machine and disconnect from power source.
2. Turn the food chute in an anti-clockwise direction to unlock.
3. Twist the bowl anti-clockwise to the unlock position and lift out the entire section.
4. Disassemble the upper unit in the following order:
   -Food Chute
   -Auger
   -Strainer
   -Rotating Basket
   -Bowl

5. Using the included cleaning brush, thoroughly clean each of the disassembled parts using warm soapy water. Do not use abrasive cloths or liquids.
6. Do not rinse the Slow Juicer base.
7. Dry all attachments before reusing.

Helpful Tips:
Due to the powerful staining properties of the carotenoids that are found in many vegetables especially carrots, we suggest the following cleaning procedures:

1. Biodegradable soap in enough warm water to cover parts.
2. 1 part warm water to 1 part cider vinegar.
3. 1/2 small box baking soda in enough warm water to cover parts.
4. 1/4 cup bleach in sink full of warm water.
5. Never use strong household cleaners, ammonia or abrasives.
6. Bleach helps remove the stains caused by some fruits and vegetables. However, if you prefer NOT to use bleach, clean the parts as soon as possible after use.

Troubleshooting

Under the proper circumstances, your Slow Juicer will give you many top-notch juicing performances. In some instances, problems may arise. Please consult the below troubleshooting categories before contacting customer support.

If Slow Juicer does not operate

1. Check power cord and power source.
2. Check that all parts are assembled correctly.

If the Slow Juicer jams or stops operating

1. Check that the food chute is clear and not blocked.
2. Hard seeds should be removed before juicing.
3. Turn machine off and switch to reverse for 3 seconds.
4. Disassemble upper section and clear pulp.
5. Unplug the power cord; remove big pieces of food and clean machine. Then connect to power again and it should start working again.

Warranty

In the event of a problem with your item please contact support@avancer.com.au

This product is guaranteed against manufacturing defects for a period of 3 years.

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

If the Juicer is shown to have had an inherent defect present at the time of sale, Avancer will provide you with a replacement.

According to the Waste Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. The above symbol on the product or its packaging indicates that this product is not to be handled as normal household waste but is to be taken to a recycling collection point for electrical and electronic goods. By correctly disposing of this product you are contributing to the protection of the environment and to the health of your fellow human beings. Improper disposal endangers health and the environment. Further information about the recycling of the product may be obtained from your local council, refuse collection department or the store where you purchased the product.